


EQE5700C
EQE5700D
EQE5707C

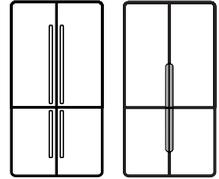


**Enjoy peace of mind.
Register your appliance today.**

Stay updated on better living services,
safety notices and shop for accessories.

- 1. Open the camera app on your smartphone and point at the QR code to scan**

Product Registration QR code is located on the front of the door or internal side wall of your fridge.

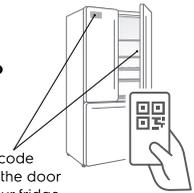

- 2. Tap the notification or link to open the registration form**
- 3. Complete your details and enjoy peace of mind**



Electrolux

CONTENTS

1. SAFETY INFORMATION	3
2. DESCRIPTION OF THE APPLIANCE	5
3. INSTALLING YOUR NEW APPLIANCE	8
4. TEMPERATURE CONTROL	13
5. USING YOUR REFRIGERATOR	19
6. GENERAL INFORMATION	23
7. FOOD STORAGE GUIDE	24
8. TROUBLESHOOTING	25
9. NOISES	29

WE'RE THINKING OF YOU

Thank you for choosing Electrolux. We have designed this product to make your life simpler and deliver impeccable performance for many years. Please spend a few minutes reading this document to get the best from your new Electrolux appliance.

This appliance is designed to work safely within 130-280V, 50Hz. If in your area Voltage fluctuations are beyond this range, you are advised to use suitable Voltage stabilizer /Electrical protection to safeguard the Appliance. Company warranty for appliance not applicable if voltage fluctuates beyond this range.

CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.

 Warning / Caution-Safety information.

 General information and tips.

 Environmental information.

Subject to change without notice.

1. SAFETY INFORMATION

Note: You must read these warnings carefully before installing or using the refrigerator. If you need assistance, contact your customer care center. The manufacturer will not accept liability, should these instructions or any other safety instructions incorporated in this book be ignored.



WARNING

- It is essential the electric outlet is properly earthed to ground. Consult a qualified electrician if you are unsure.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Unplug the refrigerator before cleaning or moving it to avoid electric shock.
- Never unplug the refrigerator by pulling the electrical cord as this may damage it. Grip the plug firmly and pull straight out.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Don't use a steam cleaner. If live components come into contact with condensing steam, they may short-circuit or cause an electric shock.
- Do not store explosive substances such as aerosol cans with a flammable propellant this appliance. If pressurized aerosol containers bear the word 'flammable' and/or a small flame symbol, do not store them inside any refrigerator or freezer. If you do so you may cause an explosion.
- Do not damage the refrigerant circuit
- This appliance contains insulation formed with flammable blowing gases. Avoid safety hazards by carefully disposing of this appliance.
- If you wish to discard this refrigerator, please contact your local authorities and ask for the correct method of disposal.
- When you dispose of your old refrigerators and freezers, remove any doors. Children can suffocate if they get trapped inside.
- When positioning the appliance, ensure the supply cord is not trapped or damaged.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



WARNING

R600a refrigerant warning



This appliance contains flammable R600a refrigerant. Avoid safety hazards by carefully installing, handling, servicing and disposing of this appliance.

- Ensure that the tubing of the refrigerant circuit is not damaged during transportation and installation.
- Leaking refrigerant may cause eye injuries or ignite.
- The room for installing appliance must be at least 1m³ per 8g of refrigerant. The amount of refrigerant in the appliance can be found on the rating plate inside the appliance.
- If you are unsure of the refrigerant check the rating plate inside the refrigerator compartment
- It is hazardous for anyone other than an Authorized Service Person to service this appliance. In Queensland Australia the Authorization Service Person **MUST** hold a Gas Work Authorization for hydrocarbon refrigerants to carry out servicing or repairs which involve the removal of covers.
- Keep ventilation openings in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.




WARNING

Stable Footing

When your refrigerator is in place, you need to stabilize it. Lift the front of the refrigerator to take the weight off each stability foot and make small quarter turns to each foot until it is in firm contact with the floor. If you intend to move the refrigerator, remember to wind up each foot so that you can move it freely. Repeat the process of the foot adjustment once you have settled on the new location of the refrigerator.

Side View

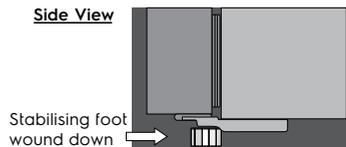

GENERAL WARNINGS

Read the following carefully to avoid damage or injury. It is important to use your refrigerator safely. Check these safety points before using your refrigerator.

- The appliance must be plugged into its own dedicated electrical outlet.
- The plug must be accessible when the refrigerator is in position.
- It is essential the power point is properly earthed to ground. Consult a qualified electrician if you are unsure.
- Don't use extension cords or adapter plugs with this refrigerator.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Unplug the appliance before cleaning and before changing the light bulb (when fitted) to avoid electric shock.
- Never unplug the refrigerator by pulling the electrical cord as this may damage it. Grip the plug firmly and pull straight out.
- Choose a location for your refrigerator that isn't too cold. The ambient room temperature should be above 10°C.
- Stand your refrigerator in a dry place avoid areas of high moisture or humidity.
- Don't put the refrigerator in frosty or unprotected areas like a garage or on the verandah.
- Don't plug your refrigerator into a timer fitted to the powerpoint.
- Do not put the refrigerator in direct sunlight, near stoves, fires or heaters.
- Do not put the refrigerator on an uneven surface.
- Do not store flammable materials on or under the appliance, e.g. aerosols.
- Never store fizzy drinks in the freezer compartment.
- Never try to repair the refrigerator yourself, only use a qualified or authorized service person for repairs.
- Never use electric heaters or dryers to defrost the freezer because you can receive an electric shock.
- When transporting and installing the refrigerator, care should be taken to ensure that no parts of the refrigerating circuit are damaged.
- If the appliance is equipped with an Ice maker or a water dispenser, fill them with potable water only.

- If the appliance requires a water connection, connect it to potable water supply only.
- When installed correctly, your refrigerator should:
 - Have adequate space at the back and sides for air circulation.
 - Be vertically aligned to the surrounding cupboards.
 - Have doors that will self-close from a partially open position.

NOTE: You must read these warnings carefully before installing or using the refrigerator. If you need assistance, contact your Customer Care Department. The manufacturer will not accept liability, should these instructions or any other safety instructions incorporated in this book be ignored.



Environmental information.


This appliance is intended to be used in household and similar applications such as,

- The kitchen areas in shops, office and other working environments;
- Farm house and by clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments;
- Catering and similar non-retail applications;

2. DESCRIPTION OF THE APPLIANCE

QUATTRO FRENCH DOOR REFRIGERATOR FEATURES

• EQE5707C

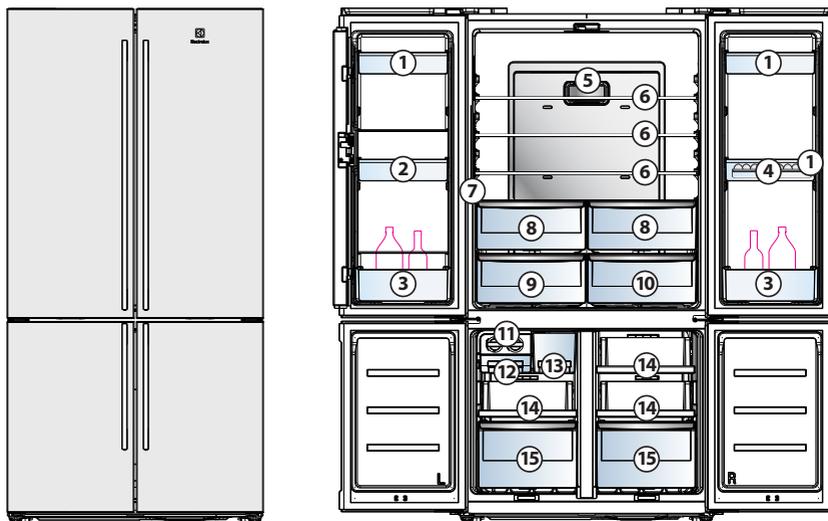

EQE5707C illustrated

The details of the refrigerator feature:

1	Door Bins*	8	Crisper Drawer With AHC
2	Door Bin Small*	9	Multi Chill Drawer
3	Bottle Storage Bins	10	Deli Drawer
4	Egg Tray	11	Twist & Serve Ice Maker
5	Air Filter	12	Ice Container bin
6	Glass Shelves	13	Ice Storage bin
7	UI Control Panel (on the left side wall)	14	Pull Out Tray Freezer
		15	Drawer storage freezer


NOTE:

* Door bin (2) is slightly smaller than Door bin (1), Position must be installed as per above picture.

Features may vary depending on model. Not all models will have features listed.

QUATTRO FRENCH DOOR REFRIGERATOR FEATURES

• EQE5700C

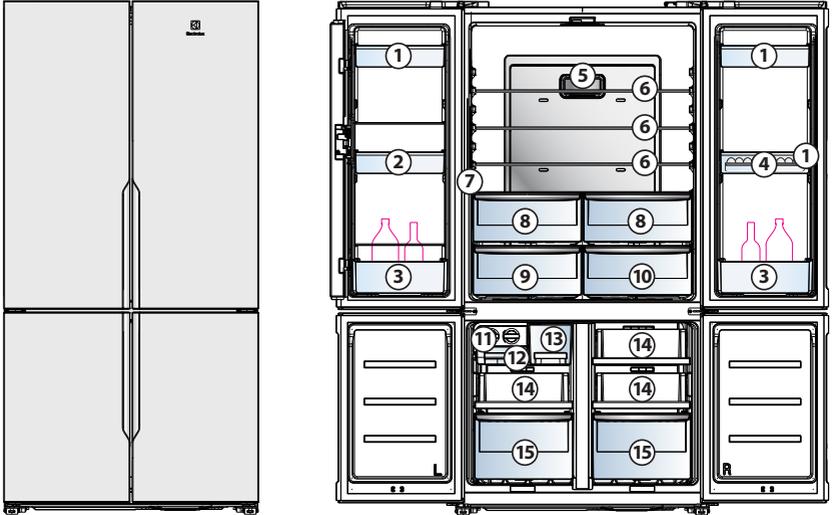

EQE5700C illustrated

The details of the refrigerator feature:

- | | |
|--|--|
| <ul style="list-style-type: none"> 1 Door Bins* 2 Door Bin Small* 3 Bottle Storage Bins 4 Egg Tray 5 Air Filter 6 Glass Shelves 7 UI Control Panel
(on the left side wall) | <ul style="list-style-type: none"> 8 Crisper Drawer With AHC 9 Multi Chill Drawer 10 Deli Drawer 11 Twist & Serve Ice Maker 12 Ice Container bin 13 Ice Storage bin 14 Pull Out Tray Freezer 15 Drawer storage freezer |
|--|--|


NOTE:

* Door bin (2) is slightly smaller than Door bin (1), Position must be installed as per above picture.

Features may vary depending on model. Not all models will have features listed.

QUATTRO FRENCH DOOR REFRIGERATOR FEATURES

• EQE5700D

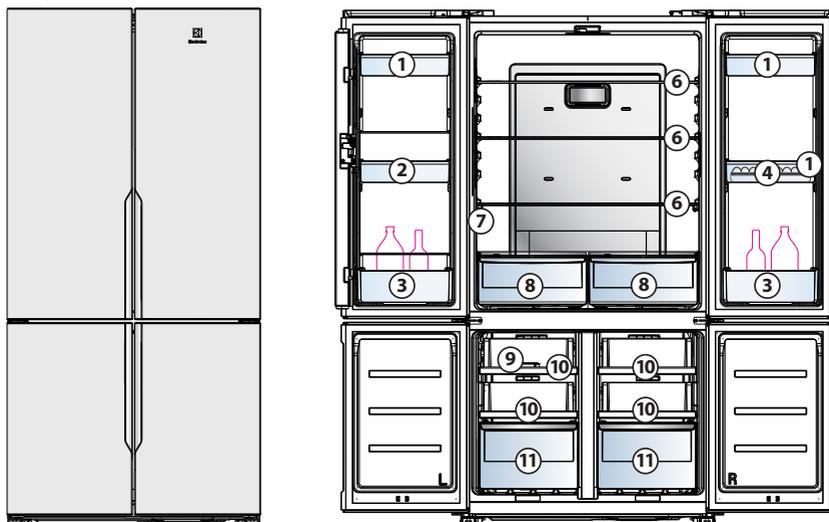

EQE5700D illustrated

The details of the refrigerator feature:

- | | |
|--|--|
| <p>1 Door Bins*</p> <p>2 Door Bin Small*</p> <p>3 Bottle Storage Bins</p> <p>4 Egg Tray</p> <p>5 Air Filter</p> <p>6 Glass Shelves</p> | <p>7 UI Control Panel
(on the left side wall)</p> <p>8 Crisper Drawer</p> <p>9 Ice tray ball</p> <p>10 Pull out tray freezer</p> <p>11 Drawer Storage Freezer</p> |
|--|--|

NOTE:

* Door bin (2) is slightly smaller than Door bin (1), Position must be installed as per above picture.

Features may vary depending on model. Not all models will have features listed.

3. INSTALLING YOUR NEW APPLIANCE

UNPACKING



Environment

Most of the packing materials are recyclable. Please dispose of those materials through your local recycling depot or by placing them in appropriate collection containers.

Important – check for any damages or marks. If you find the refrigerator is damaged or marked, you must report it within 7 days should you wish to claim for damage/ marks under the manufacturer's warranty. This does not affect your statutory rights.

Clean your refrigerator thoroughly following the instructions in the "Cleaning" section and wipe off any dust that has accumulated during shipping.

LOCATING THE REFRIGERATOR



CAUTION

Automatic aerosol systems (such as insect control) should not be located adjacent to the product as the spray may cause long term damage to the external plastics of the appliance.


Do not put the refrigerator in a location that is too cold or is unprotected, for example in a garage or on a veranda. The ambient temperature should be above 10°C.

Put the refrigerator in a dry place avoiding areas of high moisture or humidity.

Ensure the refrigerator is located on an even surface.

INSTALLING YOUR REFRIGERATOR

For EQE5700C and EQE5700D models

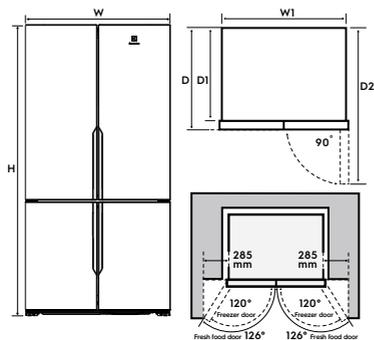


Product Dimensions

Total width (W)	mm	896
Total depth (D)	mm	726
Maximum height (H)	mm	1795
Cabinet width (W1)	mm	890
Cabinet depth (D1)	mm	640
Depth door open 90° (D2)	mm	1104

INSTALLING YOUR REFRIGERATOR

For EQE5707C model

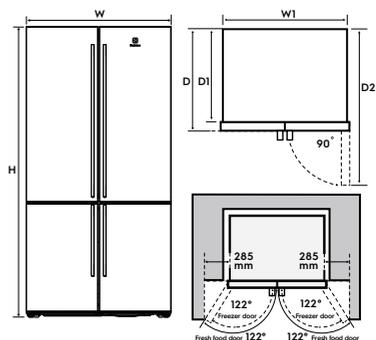

Product Dimensions

Total width (W)	mm	896
Total depth (D)	mm	704*
Maximum height (H)	mm	1795
Cabinet width (W1)	mm	890
Cabinet depth (D1)	mm	640
Depth door open 90° (D2)	mm	1112

When positioned in a corner area, spacing of at least 285mm on the hinge side will allow the doors to open enough to enable the removal of bins and shelves.

Note : * not included handlebar


Installation options for optimal aesthetics :

Minimum side clearance kitchen cabinet

Fridge body must sit 10mm proud of kitchen cabinetry.

For EQE5700C, EQE5700D and EQE5707C models

Minimum cabinetry opening (WxDxH) :
900mm x 649mm x 1800mm

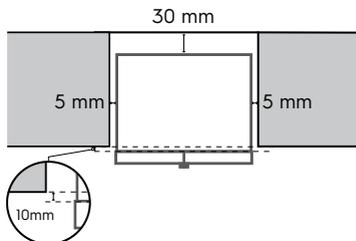


Front of fridge body in line with kitchen cabinet

Side clearance must be 25mm either side of fridge body, to have the fridge doors sitting proud of the kitchen cabinetry.

For EQE5700C, EQE5700D and EQE5707C models

Minimum cabinetry opening (WxDxH) :
940mm x 659mm x 1800mm

Note : Spacers supplied to assist

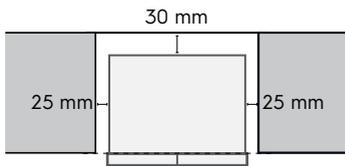


Fridge door flush with the cabinetry

Side clearance must be 90mm either side of the fridge body, to have the fridge doors sitting flush with the kitchen cabinetry.

For EQE5700C and EQE5700D models

Minimum cabinetry opening (WxDxH) :
1070mm x 741mm x 1800m

Note : Spacers supplied to assist

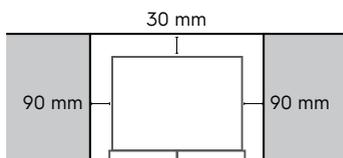


Fridge door flush with the cabinetry

Side clearance must be 30mm either side of the fridge body, to have the fridge doors sitting flush with the kitchen cabinetry.

For EQE5700C model


Minimum cabinetry opening (WxDxH) :
950mm x 724mm x 1800mm for slim door

Note : Spacers supplied to assist

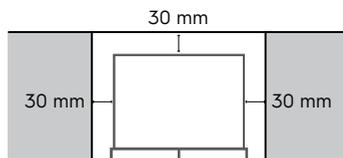


Note : Top gap all 5 mm.


- Roll the refrigerator into place. The rollers are designed for forward or backward movement only. They are not castors. Moving the refrigerator sideways may damage your floor and the rollers. Before moving your refrigerator ensure height adjusting nut and the stability foot are fully wound up off the floor.
- Wind the large height adjusting nut under door hinge down until the refrigerator is tilted back by 10mm (see diagram).

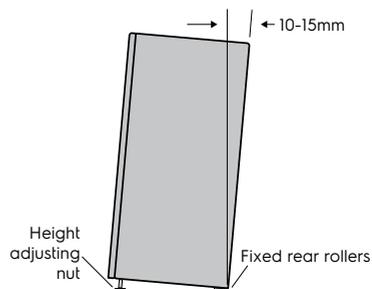

- Wind the large height adjusting nut on the handle side down until the refrigerator is level and stable. If you have difficulty winding the nut or height adjusting foot down, have someone tilt the refrigerator back so you have better access.

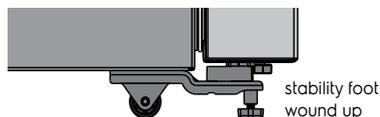


4. Check the alignment of the refrigerator to the surrounding cupboards to see if it is level. You can adjust the level as detailed in step 2 and 3.

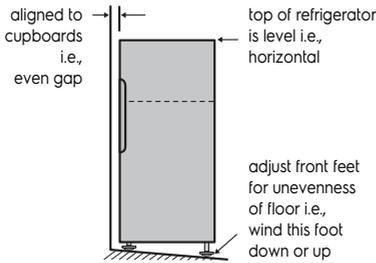

5. If you find your refrigerator rocks from corner to corner, it means your floor is uneven. Find a piece of plastic or hardboard etc. and pack it firmly under the roller.
6. You may now need to fine-tune the installation by repeating steps 3, 4 and 5.
7. When you have the appliance in its final position, it needs to be stabilised. Wind the stability foot under the door hinge down to the floor until it just makes contact with the floor. Lift the front of the appliance to take the weight off the stability foot, then turn it half a turn further to ensure firm contact with the floor. Wind the large height adjusting nut back up to ensure all the weight is now on the front stability foot.

Front view

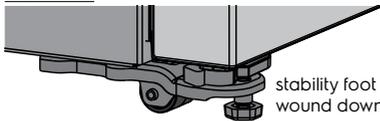


8. Repeat step 7 for the stability foot on the handle side. Whenever you need to move the appliance, be sure to wind the feet back up so that the appliance can roll freely and be sure to reset it when reinstalling.
9. Plug your refrigerator straight into its own power point and never use a double adapter. If you need to roll the refrigerator to get to the plug, remember to raise the stability foot first.
10. Before you put any food in your refrigerator, it's recommended you leave it on for 2 or 3 hours to check it is running properly.

Recommended dimensions for the door flush installation

NOTE: for EQE5707C model only

Before installation, ensure cabinetry opening is not smaller than the minimum sizes specified for your chosen install type. A rear chimney is not necessary for this fridge model. The specified ventilation cross-sections must be adhered to in order to ensure the correct functioning of the appliance.

D1 Cabinetry Depth	W1 Cabinetry Width	H1 Cabinetry Height
724 mm	950 mm	1800 mm

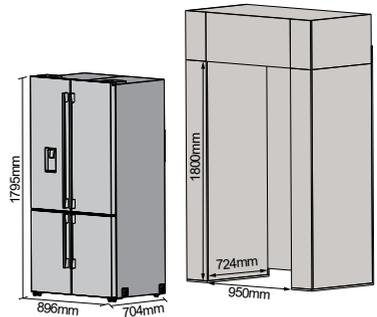

Installing the product to the niche


1. There are six spacers included to help you keep your fridge perfectly centred in the cabinetry opening and with enough space behind to vent correctly.

To setup the 25mm/30mm spacer blocks to the correct size, you can join the two spacer block halves together in one of two directions.


Each spacer block has two components:

Top half (part A): curved dome with 25 and 30 printed on top

Bottom half (part B): Is a flatter piece with two long adhesive strips on its underside plus two clip arms on its top side

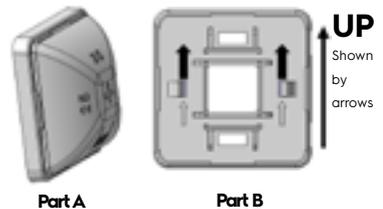


For 25mm spacer (door proud install – side spacers)

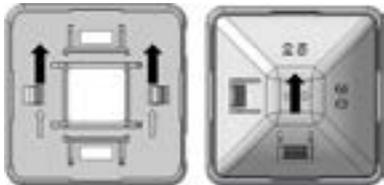

Rotate the top half so that the 25 marking on the top half is facing up . Pushing the two halves together firmly should make a 25mm thick assembly.



To secure this to your fridge, peel the protective layer off the adhesive strips, and attach the spacer to your fridge side in the below four locations (two per side)

For 30mm spacer (door flush install – side spacers / rear spacer – all install types)

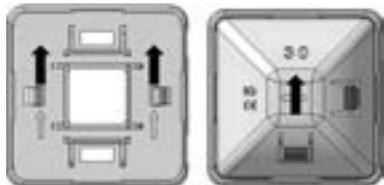


Rotate the top half so that the 30 marking on the top half is facing up . Pushing the two halves together firmly should make a 30mm thick assembly.


To secure this to your fridge, peel the protective layer off the adhesive strips, and attach the spacer to your fridge side in the below four locations (two per side) plus two at the rear of your fridge as shown.

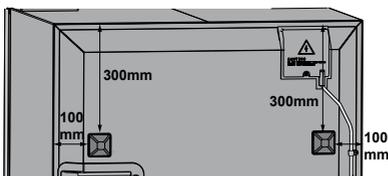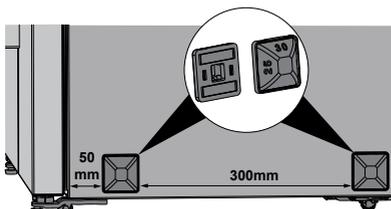


2. Sliding appliance into the installation niche.

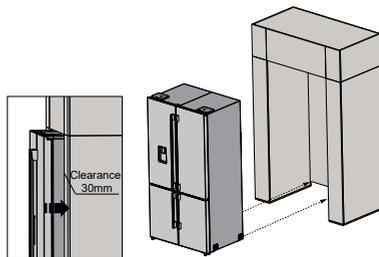

3. Adjust the leveling leg to keep the appliance level and stable.

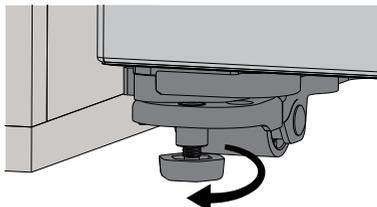

4. Confirm the Appliance Door flush with the Niche. The leveling & stability of the product.

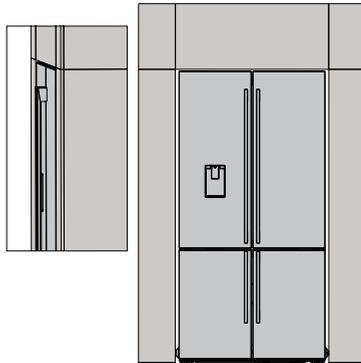

DOOR OPENING

Your refrigerator should be positioned to allow easy access to a counter when removing food. For best use of refrigerator drawers and freezer baskets, the refrigerator should be in a position where both doors can be fully opened.

Cabinet Levelling & Refrigerator Door

Alignment (if necessary)

All four corners of the cabinet must rest firmly on the floor

- The front should be slightly elevated to ensure that doors close and seal properly.
- Doors should align with each other and be level.


Most of these conditions can be met by raising or lowering the adjustable front rollers.

To level the cabinet using the front rollers:


1. Lower anti-tip legs until they are both touching the floor. Use a pair of pliers to adjust.

To raise: turn leg clockwise.

To lower: turn leg counterclockwise.

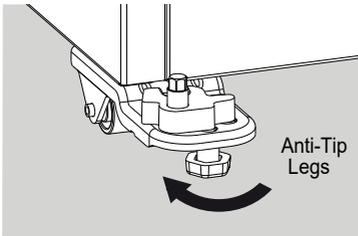


2. Ensure both doors are bind-free with their seals touching the cabinet on all four sides and that cabinet is stable.

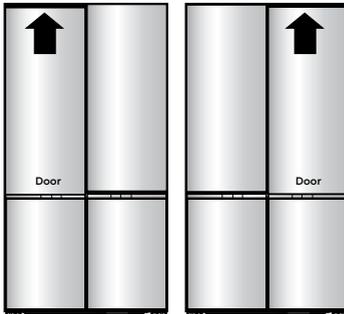


After you level the unit, lower the anti-tip leg until it firmly contacts the floor. You may need to use an adjustable wrench for adjustment.

If the doors are not aligned, lift the lower door up and insert the washer (two are included in the plastic bag in the Crisper) on the center hinge pin. This will raise the door to be aligned with the other door.

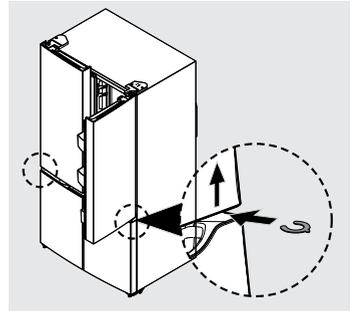

FLIPPER MULLION

Adjust Flipper Mullion for proper connection with the mullion guide by ensuring the flipper mullion is folded and perpendicular to the fresh food door. If the mullion guide is not in the correct position, it could prevent the door from closing completely.

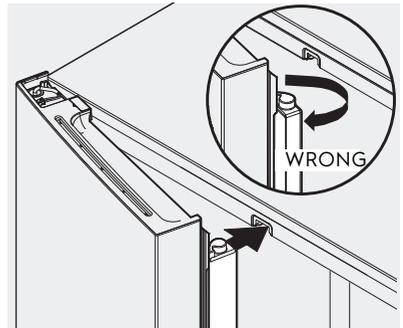

FITTING THE HANDLES

For models with 'Pole' handles, the handles are supplied prepackaged inside your refrigerator and will require fitting. Refer to the instructions provided in the pack.

Congratulations! You have successfully installed your new refrigerator

4. TEMPERATURE CONTROL

The following pages explain the various functions of the user interface to help you better understand how to get the most out of your new refrigerator.



IMPORTANT


NOTE: When you set a temperature, you set an average temperature for the whole refrigerator cabinet. Ensuring that you make only small adjustments and wait at least 24 hours to see if the new temperature is correct to your liking.


Checking the softness of ice cream is a good indication that your freezer is the right temperature, while checking the temperature of water kept in the refrigerator is a good way of checking the temperature of the food compartment.

Temperatures inside each compartment may vary, depending on how much food you store and where you place it.

High or low room temperature may also affect the actual temperature inside the refrigerator.

4.1 FUNCTIONS OF THE USER INTERFACE

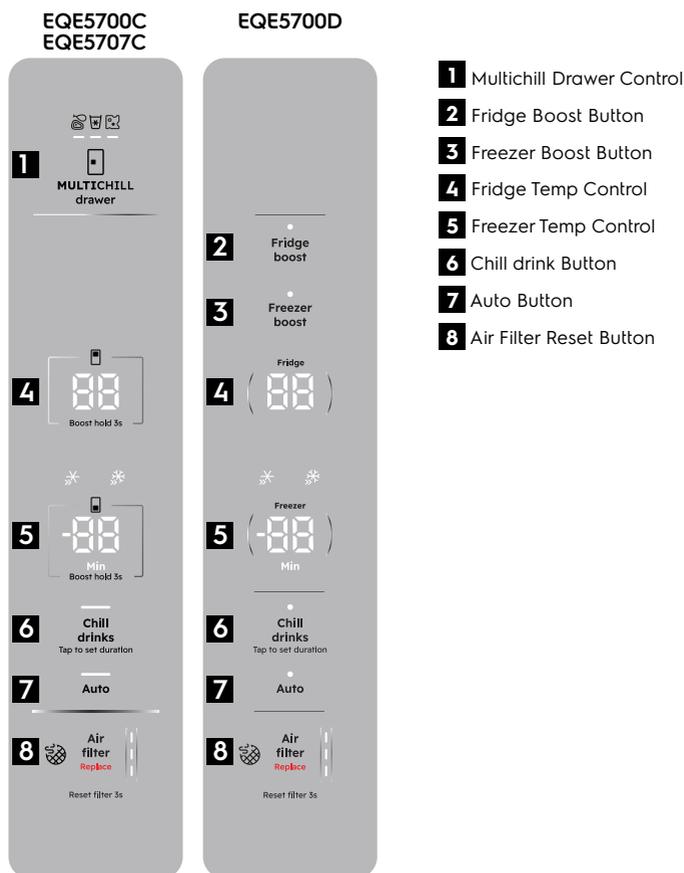

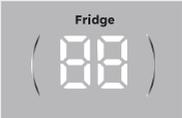Function	Operation (depending on model)
<p>1 Multichill Drawer Control</p> <p>Meat & Fish</p>  <p>Cold Drinks mode</p>  <p>Deli Snacks mode</p> 	<p>Tap on MULTICHILL drawer button, Activates the next mode. The LED of the next mode lights up.</p> <p>MULTICHILL drawer has 3 temperature modes:</p> <ul style="list-style-type: none"> -2°C Meat & Fish -0°C Cold Drinks 3°C Deli snacks
<p>2 Fridge Boost Control</p> <p>For EQE570°C model</p>  <p>For EQE5700D model</p>  <p>Fridge Boost indicator</p> 	<p>Press & Hold on Fridge digits for 3 seconds.</p> <p>Tap on Fridge digits to adjust temperature.</p> <p>When Fridge Boost is ON, the Fridge Boost indicator lights up. When Fridge Boost is OFF, the Fridge Boost indicator turns off.</p> <p>Use the Fridge Boost when you add a large amount of food to the refrigerator compartment after grocery shopping or to quickly cooled your drink. When Fridge Boost is on, the cold air circulates into the refrigerator to temporarily reduce the temperature to 1°C for 6 hours,</p> <p>Freezer compartment continues to run at set temperature.</p> <p>Quick chill auto turn off on either of these conditions:</p> <ul style="list-style-type: none"> - 6 hours has elapsed - Fridge temp is adjusted

Function	Operation (depending on model)
<p>3 Freezer Boost Control</p> <p>For EQE570°C model</p>  <p>For EQE5700D model</p>  <p>Freezer Boost indicator</p> 	<p>Press & Hold on Freezer digits for 3 seconds. Tap on Freezer digits to adjust temperature.</p> <p>When Freezer Boost is ON, the Freezer Boost indicator lights up. When Freezer Boost is OFF, the Freezer Boost indicator turns off.</p> <p>Use the Freezer Boost function when you add a large amount of food to the freezer compartment after grocery shopping, to speed up the freezing process. When Quick freeze is on, the compressor will run continuously for 6 hours. Fridge compartment continue to run at set temperature.</p> <p>Quick freeze auto turn off on either of this condition:</p> <ul style="list-style-type: none"> - 6 hours has elapsed - Freezer temp is adjusted to -23°C
<p>4 Fridge Temp Control</p> <p>For EQE570°C model</p>  <p>For EQE5700D model</p> 	<p>Taps on the display to cycle through the temperature range supported by the Fridge.</p> <p>From 7°C To 1°C Default 3°C</p>
<p>5 Freezer Temp Control</p> <p>For EQE570°C model</p>  <p>For EQE5700D model</p> 	<p>Taps on the display to cycle through the temperature range supported by the Freezer.</p> <p>From -14°C To -23°C Default -19°C</p>

Function	Operation (depending on model)
<p>6 Chill drink Button</p>  <p>Chill Drinks timer indicator</p> 	<p>The Drinks Chill timer is used to quickly chill a bottle inside the freezer compartment and to warn the user when it ends.</p> <p>Tap on Drinks Chill button, Freezer display shows 20,"Min" and Drink Chill LED turns on.</p> <p>The timer option is from 20 minutes and the user can add time in 5 min intervals up to 45 minutes. After it starts the timer will show the countdown minute by minute.</p> <p>NOTE: When timer countdown is in progress, the timer duration cannot be adjusted. User will need to deactivate Drinks Chill and activate Drinks chill again to set a new timer.</p>
<p>7 Auto Button</p>  <p>When AutoSense is activated</p> 	<p>This feature is OFF by factory default</p> <p>Activate AutoSense</p> <ol style="list-style-type: none"> 1. Short press on the button to activate 2. Key Confirm Tone for the press 3. Fade in LED above 'Auto' button 4. Fridge & Freezer temperature display 'Au' 5. On going boost features (Fridge boost, Freezer boost, drink chill) will be interrupted. <p>Deactivate AutoSense</p> <ol style="list-style-type: none"> 1. Short press on the 'Auto' button to deactivate AutoSense 2. Key Cancel Tone for press 3. Fade out LED above 'Auto' button 4. Fridge & freezer temperature fade in current set temperature <p>User can also trigger other actions or features that will deactivate AutoSense completely or temporarily, check the section C for more detailed specification.</p> <p>When AutoSense is activated, using following features will interrupt and override AutoSense :</p> <ul style="list-style-type: none"> • Temperature adjustment for fridge and freezer <p>When AutoSense is activated, using following feature will temporarily override AutoSense. After the action is completed, fridge will activate AutoSense again :</p> <ul style="list-style-type: none"> • Fridge boost (Quick chill) • Freezer boost (Quick freeze) • Drink chill <p>Following features are still available with AutoSense, user can interact as normal for those actions:</p> <ul style="list-style-type: none"> • MULTICHILL drawer setting • Filter indicator and reset (Air, Water, Produce keeper) • Alerts

Function	Operation (depending on model)
<p>7 Auto Button (continou)</p>  <p>When AutoSense is activated</p> 	<p>Check current set temperature when AutoSense is active</p> <p>When AutoSense is active, user can check current set temperature by pressing the 'Au' digits in fridge or freezer compartment.</p> <ol style="list-style-type: none"> 1. Short press on 'Au' button (in fridge / freezer digits display) 2. Key Accept Tone for the press 3. Fade out 'Au' in selected compartment digit display 4. Fade in current set temperature in both digits displays <p>If user press the digits display during 4 seconds timeout, AutoSense is interrupted and be taken over to manual control</p> <ol style="list-style-type: none"> 1. Key Accept Tone 2. Fade out LED above 'Auto' button 3. Fade out set temperature and 'Au' in digits display 4. Fade in next set temperature in sequence <p>After 4 seconds (without interaction)</p> <ol style="list-style-type: none"> 1. Fade out current set temperature in both digits displays 2. Fade in 'Au' in selected compartment digit display 3. Key Confirm Tone
<p>8 Air Filter Alert and Reset</p> 	<p>Replace air filter indicator will light up every 6 months. Reseting air filter is a secondary feature, by long pressing on the Air filter button.</p> <p>Long press on the Air filter button to reset the filter status</p> <ol style="list-style-type: none"> 1. Short press on the button 2. Key Accept Tone for press 3. After holding the button for 3 seconds, filter status is reset 4. Fade out indicator  5. Key Confirm Tone 6. After resetting is completed, the timer of the filter starts to count down again.
<p>Sabbath mode</p> 	<p>Press and hold Freezer and Chill drinks for 5 seconds and "Sb" shows on Fridge display.</p> <p>When activated, all lights and UI will not work until Sabbath Mode is deactivated.</p> <p>The Sabbath Mode is a feature that disables portions of the refrigerator and its controls in accordance with observance of the weekly Sabbath and religious holidays within the Orthodox Jewish Community.</p> <p>NOTE: All alarm functions are deactivated included High temperature alarm.</p> <p>The unit stays in Sabbath Mode after power outage recovery. It must be deactivated by the user.</p>

4.2 ALERT AND ALARMS

Door alarm

When any of the door is left open for 2 minutes. The alarm will sound, and all LEDs that are currently on.

The alarm is turned off by closing the door or resetting the countdown by pressing any key on the control panel.

High Temperature alert

In the event of high temperature condition, audio alarm is played every 10 seconds until the alert is acknowledged.

The alarm by pressing any key on the control panel.

Display and blink "HI" in the correspondent compartment display, whichever is in the high temperature condition.



High Temp indicator on **Fridge display**



High Temp indicator on **Freezer display**

Water filter alert and reset

Water Filter alert warns user that the Water filter have to be changed as soon as possible.

When water filter is used for 6 months or 120 gallons (about 454 litres) of water has been dispensed since the last filter reset, LED "Replace" will automatically illuminate.

Note:

1. Users could reset the filter when alert is not visible. Play tone_Confirm once it is reset
2. LED "Replace" remains visible during sleep mode, except when door is closed

Air filter alert and reset

Air Filter alert warns user that the Air filters have to be changed as soon as possible.

When air filter is used for 6 months since the last filter reset, the LED "Replace" will automatically turn ON.

Note:

1. Users could reset the filter when alert is not visible. Play tone_Confirm once it is reset
2. LED_air filter remains visible during sleep mode, except when door is closed.

Error codes

Both Fridge & Freezer displays are used to communicate problems by code.

When error codes are displayed in the numeric display, the unit requires service attention.

"Er" shows up on **Fridge display**



Various error codes on **Freezer display**



Error code table	
Communication error	CE
FZ Cavity NTC	T1
FZ Evaporator NTC	T2
FF Cavity NTC	T3
Third cavity NTC	T5
FZ Ice maker NTC	T8

5. USING YOUR REFRIGERATOR

Refrigerators work by transferring heat from the food inside to the outside air. This operation makes the back and sides of the refrigerator feel warm or even hot particularly at start-up and on warm days - this is normal.

Avoid placing food against the air vents in the refrigerator as it affects efficient circulation. If the door is opened frequently, a light frosting will occasionally occur on the freezer's interior. This is normal and will clear after a few days. If the freezer door is accidentally kept open, a heavy frost will coat the inside walls and should be removed.


Your new refrigerator uses a high-speed compressor, along with other energy-efficient components, which may make unusual sounds and be more noticeable at night and quieter times. These sounds simply indicate your refrigerator is working how it should. They include:

- Compressor running noises;
- Air movement noise from the small fan motor;
- A gurgling sound, similar to water boiling;
- A popping noise, heard during automatic defrosting; and
- A clicking noise, prior to compressor start-up. Further details can be found in the Troubleshooting Guide



IMPORTANT

Ensure all freezer drawers and shelves are pushed back completely to prevent them from keeping the door open.

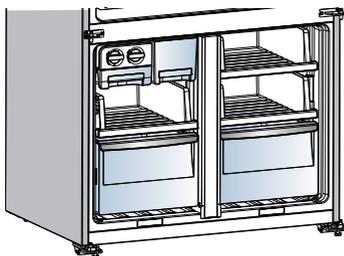

CAUTION


LED lighting

Your appliance is fitted with long life LED lighting. In the unlikely event the LED lights should fail, then the LED lights should be serviced by the service agent, to avoid a safety hazard. Refer to the warranty page for contact details.

GLASS SHELVES

To remove the shelves, gently pull them forward until the shelf comes clear of the shelf guides.

To return the shelf, make sure there is nothing behind that may obstruct movement. Gently push the shelf, into the cabinet and back into position.

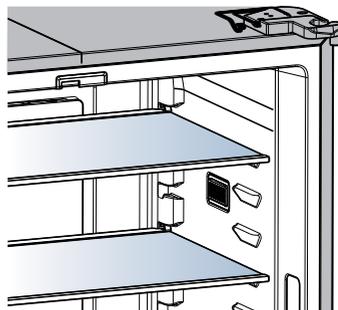

CAUTION

To avoid personal injury or property damage, handle tempered glass shelves carefully. Shelves may break suddenly if nicked, scratched, or exposed to sudden temperature change. Allow the glass shelves to stabilize to room temperature before cleaning. Do not wash in dishwasher.


DRAWERS

Your refrigerator includes a variety of storage drawers.

Crisper

Removal (standard Crisper Bins):

1. Empty food from the Drawer. On some models it will be necessary to remove the bottle storage bins.
2. Remove the Drawer by pulling forward, then up and forward again.
3. For top mount and single door, remove the crisper shelf by lifting the catches on the left and right underside of the shelf and pulling the shelf forward.

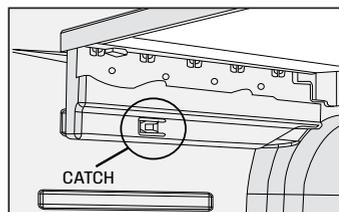

Drawers fitted with telescopic slides

To remove the drawer for cleaning.

1. Empty food from the drawer.
2. Remove the drawer by pulling it forward and lifting the front to unhook it from the slides. Once you have removed the drawer, ensure the slides are pushed back so they are fully closed.



WARNING


Never close the door while the telescopic slides are extended. This may damage the slide and/or refrigerator or cause the slide to become disengaged from the refrigerator.

To replace the drawer:

1. Ensure the telescopic slides are pushed in all the way.
2. Slide the drawer into place over the slides and push the bin in until it stops.
3. Drop drawer into position.

Crisper (with automatic humidity control)


Crisper drawers are designed for storing fruits, vegetables, and other fresh produce. Crispers have an auto humidity control (with replaceable membrane) on the back of each crisper under the humidity control cover.

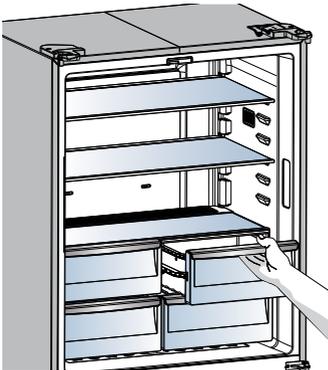

To remove the auto humidity control membrane:

1. Reach to back of humidity control cover.
2. Pull up on cover.
3. Pull cover towards back of cabinet and remove.
4. Replace humidity membrane.


5. Replace cover by reversing the steps above. Repeat for both crispers.

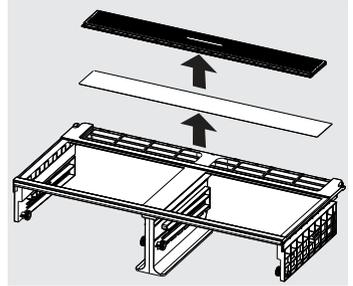

Remove the auto humidity control membrane

To remove the crisper for cleaning:

1. Pull the drawer out until it stops.
2. Lift the front slightly and remove the drawer.

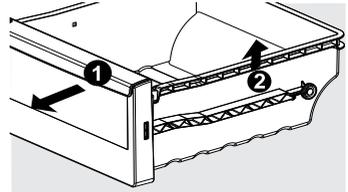


Removing Crisper

FREEZER STORAGE

To remove freezer drawers:

All freezer drawers are removable.

1. Open doors completely to gain access to drawers.
2. Pull the drawer to the stopper. Lift up and pull to remove it from the cabinet.
3. Reverse the steps to reinstall drawer

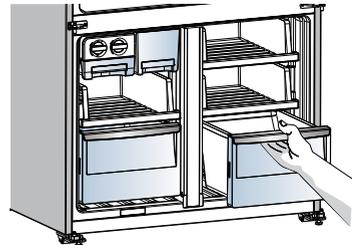

DOORS


Storage bins

The doors to your fresh food compartment use a system of modular storage bins. All of these bins are removable for easy cleaning. Bins can be adjusted to your needs.

Door bins are ideal for storing jars, bottles, cans, and large drink containers. They also enable quick selection of frequently used items.

To remove the door bin:

1. Lift and unlock from lugs to remove.
2. Replace by lift up and push bin down until the support lugs lock it in place.

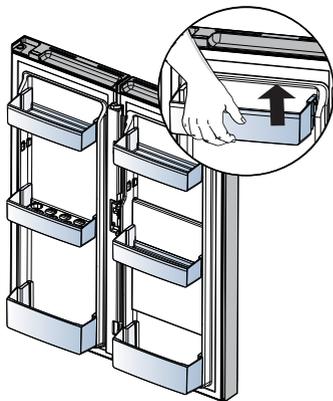


Removing door bin


TWIST & SERVE ICE BIN

Note: Twist & serve ice bin for EQE570°C model only.

1. Prior the first use clean the ice tray.
2. Fill the water up to max level of the ice tray.

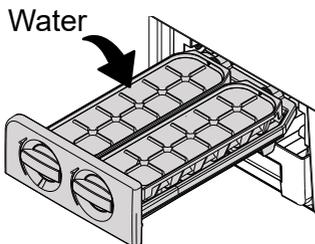


3. Put the ice tray in place.
4. Rotate ice twist clockwise to release the ice from ice tray.

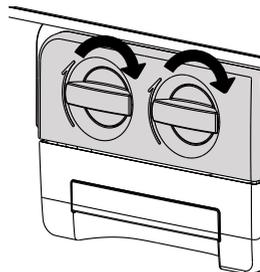


ICE BALL TRAY

Note: Ice ball tray for EQE5700D model only.

1. Prior to using the ice tray, clean it with water and dish detergent
2. To make ice ball, fill the ice tray with water until the water level.

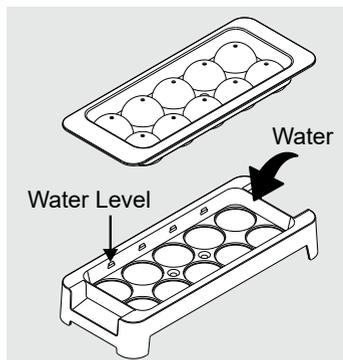


3. Close the ice tray with the top cover. Remove extra water by pressing the ice tray

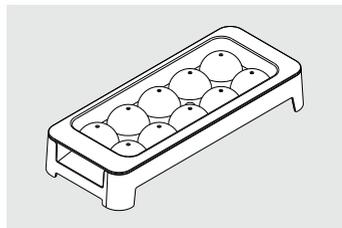


4. Place the ice tray in freezer compartment.

5. To remove ice balls. Pull the lid handle out to open the tray

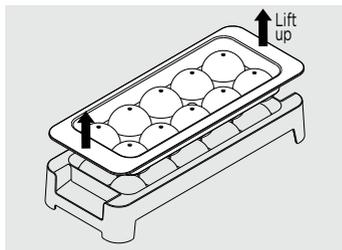

6. Hold the tray at its ends and twist gently.

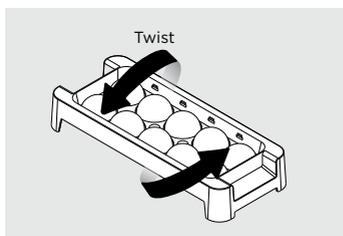

NOTE:

- Place the ice ball tray on a flat surface in freezer compartment
- The ice making time depends in your temperature setting.

6. GENERAL INFORMATION

CLEANING YOUR REFRIGERATOR



WARNING

BEFORE CLEANING: Turn the refrigerator off at the power point and unplug the cord to prevent any chance of electrocuting yourself.

Doors and exterior (white and silver):

You should only clean the doors with lukewarm soapy water and a soft cloth.

Vinyl Coated Material (Silver and Black)

Your VCM refrigerator is manufactured from mark-resistant stainless steel. This stainless steel has a special advanced protective coating that eases the removal of marks such as fingerprints and water spots. To keep its appearance, clean it regularly with lukewarm soapy water and a soft cloth.

Interior

Clean the inside of your refrigerator regularly with a soft cloth, unscented mild soap and lukewarm water. Thoroughly dry all surfaces and removable parts and avoid getting water on the controls. Replace removable parts, plug power cord in and switch the power on before returning the food.

Ice and water

Clean the components of the ice maker/water dispenser regularly with a soft cloth, unscented mild soap and rinsing thoroughly with lukewarm water. For further information on the care and cleaning of your ice maker, ice dispenser or water dispenser refer to the section "Ice and Water Models"

Door seals

Always keep door seals clean by washing them with a mild detergent and warm water, followed by a thorough drying. Sticky food and drink can cause seals to stick to the cabinet and tear when you open the door.



CAUTION

Never use hot water, solvents, commercial kitchen cleaners, aerosol cleaners, metal polishes, caustic or abrasive cleaners, or scourers to clean your refrigerator. Many commercially available cleaning products and detergents contain solvents that will damage your refrigerator. Use only a soft cloth with an unscented mild soap and lukewarm water.



CAUTION

To clean a crisper or freezer bin with telescopic extension slides, simply wipe with a damp cloth and warm soapy water. Never immerse the cover in water, as this could affect the operation of the slide.

Switching off your refrigerator

If you switch off your refrigerator for an extended period, follow these steps to reduce the chances of mould.

1. Remove all food.
2. Remove the power plug from the power point
3. Thoroughly clean and dry the Interior.
4. Ensure that all the doors are wedged open slightly for air circulation.

CHANGING THE FILTER

Air Filter (select models)

The air filter is located in the top center of the fresh food compartment.

Replacing your Air Filter

To ensure optimal filtering of refrigerator odors, you should change the air filter six months (The filter status light on the Touch Panel prompts you to replace the filter after six month)

1. Remove the air filter cover by squeezing the sides of the cover together and removing from liner
2. Remove the old filter and discard it
3. Unpack the new filter and slide it into the housing. The open face must (carbon media) of the filter should be installed facing the air port (hole) in the multi-flow.
4. Replace the air filter cover by squeezing the sides and snapping it back into place.
5. Press and hold the "Reset Air Filter" button on the control panel for three seconds. When the LED turns off, the status has been reset.



7. FOOD STORAGE GUIDE

Category	Product	Refrigerator	Freezer	Storage tips
Meat	Sausages and Mince	1-2 Days	2-3 Months	Keep cold meat at the back of the refrigerator where it is coldest.
	Chops and Steak	3-4 Days	4-6 Months	
	Cold Meats	3-5 Days	4-6 Months	Plastic can cause meat to sweat if stored in refrigerator for more than a day. Roast can take up to 48 hours to defrost properly, transfer frozen roast to the refrigerator 2 days before use.
	Roasts	3-5 Days	12 Months	
Poultry	Chicken	1-2 Days	2 Months	If poultry takes on a smell or colour you are unsure about it is best to throw it out
	Roast Chicken	3-5 Days	12 Months	
	Eggs	6 Weeks	Not Suitable	Whole eggs are not suitable for freezing, slightly beaten eggs may be frozen for four months.
Seafood	Whole fish and fillets	2-3 Days	2 Months	Store in an airtight container or foil.
	Lobster and Crab	1-2 Days	2 Months	Never freeze prawns in salty water as this will dehydrate the flesh.
	Prawns	1-2 Days	2 Months	
Dairy	Milk	Until Expiry Date	Not Suitable	If dairy takes on a smell or colour and you are unsure about it, it is best to throw it out
	Yogurt	7- 10 Days	Not Suitable	
	Hard Cheeses	2 Weeks - 2 Months	2 Months (Grated)	Depending on the variety hard cheese can last from 2 weeks to 2 months. * Texture may change depending of the type of soft cheese
	Soft Cheeses	1-2 Weeks	Not Suitable	
	Butter	8 Weeks	12 Months	
Fruit & Vegetables	Every fruit and vegetable has a different shelf life. Some stay fresh for a couple of days e.g. beans, others can last for a couple of months e.g. onions.		8-12 Months When freezing chop and blanch in small portions.	Keep vegetables in the crisper and away from the air vents to avoid freezing.
				If you wash fruit and vegetables before storing them make sure they are dry or wrap in absorbent paper before storing in the refrigerator as this can make them susceptible to rotting.
				Try to keep fruit and vegetables separated as fruits that give off high levels of ethylene (the ripening agent) can prematurely ripen and spoil surrounding vegetables
Left Overs	Homemade meals	3-4 Days	2-6 Months	Store in sealed container.
				Freeze meal in small portion sizes to limit wastage.



IMPORTANT

Please note, use this information as a guide only, actual storage times will vary depending on how you use your refrigerator, climatic conditions and the freshness of the food.

8. TROUBLESHOOTING

Appliance does not operate at desired temperature

In a modern frost free refrigerator / freezer, cold air is circulated around the various compartments through air vents using a high efficiency fan.

CONCERN	WHAT TO DO
Refrigerator is too warm	<ul style="list-style-type: none"> Adjust the refrigerator to a colder setting Ensure food is allowed to cool before placing inside the refrigerator. Ensure the appliance is set up as per instructions Ensure that contents are not obstructing the cooling vents. Ensure the door is not held open or is being opened too frequently.
Freezer is too warm	<ul style="list-style-type: none"> Adjust temperature to a colder setting. Ensure food is allowed to cool before placing inside the freezer. Ensure the appliance is set up as per instructions Ensure that contents are not obstructing the cooling vents. Ensure the door is not held open or is being opened too frequently.
Food is freezing in the refrigerator	<ul style="list-style-type: none"> Adjust temperature to a warmer setting. Ensure that fruit and vegetables are stored in the crisper. Items with a high water content should not be placed near the cooling vents.
Unable to change temperature settings	<ul style="list-style-type: none"> Refer to sections "temperature control".

Door operation

CONCERN	WHAT TO DO
Freezer door pops open.	<ul style="list-style-type: none"> This is normal and should re-close. This happens when the refrigerator door is closed too quickly. If the freezer door stays open, it indicates that the appliance needs to be tilted backwards a little further. Refer to section "Installing your new appliance".
Self close not working.	<ul style="list-style-type: none"> Check if your appliance has self closing hinges as not all models do. It indicates that the appliance needs to be tilted backwards a little further. Refer to section "Installing your new appliance".
Door not sealing properly	<ul style="list-style-type: none"> Ensure there is nothing that is preventing the door from closing such as appliance contents or items placed near the appliance. Ensure that the crisper/freezer bin is closed completely. Refit if required as referred to in the section "Using your refrigerator". Ensure the appliance is set up as per recommendations.
Door difficult to open and close	<ul style="list-style-type: none"> If the door is difficult to open just after you have closed it this is due to the pressure equalising, the door will open normally after a few minutes.

Crisper Operation

CONCERN	WHAT TO DO
Excess moisture build up in crisper It is normal for there to be some moisture and humidity in the crisper bin.	<ul style="list-style-type: none"> • Ensure that the crisper is not over packed. • Adjust crisper humidity slides. • Recommend using food wrapper (Cling film) as below shared picture or zip lock bag.
Crisper bin can not be removed	<ul style="list-style-type: none"> • If crisper bin interferes with the door bins, remove door bins before removing crisper. • Position cabinet so that the door can be fully opened.
Freezing items in the crisper	<ul style="list-style-type: none"> • Adjust temperature to a warmer setting.

Appliance noise

Your new refrigerator may make sounds that your old one didn't make. Because the sounds are new to you, you might be concerned about them. Most of the new sounds are normal. Hard surfaces, like the floor, walls and cabinets, can make the sounds seem louder than they actually are. The following describes the kinds of sounds and what may be making them.

CONCERN	WHAT TO DO
Motor noise (compressor)	Nothing. This is normal as your new refrigerator uses a high-speed compressor which switches on and off during operation. Note that the compressor noise may seem louder at the start of the on cycle.
Motor noise (compressor);	These refrigerators are fitted with a variable speed compressor and fan. At start up and on warm days they run at a higher speed to provide additional cooling. When less cooling is required the compressor and fan will run at a lower speed. As a result it is normal for sound levels to change depending on operating conditions.
A clicking noise heard just before the compressor starts.	Nothing. This is normal as your new refrigerator has an automatic switching action of the temperature control, turning the compressor on and off.
Occasional gurgling, similar to water boiling.	Nothing. As each cycle ends, you may hear a gurgling sound due to the refrigerant flowing in your refrigerator system. Nothing, this is normal as your new refrigerator uses high efficiency fans to circulate air. Fan speed and noise may increase during periods of heavy usage or hot weather.
Rattling and other noises.	<ul style="list-style-type: none"> • Ensure that the cabinet is level and stable, refer to Installation Instructions • Check the surrounds of the appliance to ensure there is nothing touching or placed on top of the appliance. • Ensure that contents of the appliance are not placed in such a way that they are vibrating (such as bottles).

Refrigerator operation

CONCERN	WHAT TO DO
<p>Appliance will not run</p> <p>It is normal for the freezer fan not to operate during the automatic defrost cycle, or for a short time after the appliance is switched on.</p>	<ul style="list-style-type: none"> • Ensure that the cord is plugged into a live power outlet and outlet is switched on. • Ensure that the household circuit breaker has not tripped or that the fuse has not blown. • The appliance maybe in defrost mode, check again in half an hour.
<p>Compressor motor seems to run too long</p> <p>At normal room temperatures, expect your motor to run about 40% to 80% of the time. Under warmer conditions, expect it to run more often.</p>	<ul style="list-style-type: none"> • Ensure that the doors are not held open. • Check that large amounts of warm food have not just been placed inside the appliance. • Note that the appliance will run more than normal just after you install it or when adjusting the temperature setting changes.
<p>Compressor motor seems to run too long. These appliances use a variable speed compressor, which by design can run for long periods of time, this is normal</p>	<ul style="list-style-type: none"> • The variable speed compressor and fan that at start up and on warm days, runs at high speeds to provide additional cooling. When less cooling is required the compressor and fan will run at a lower speed, but still may not switch off. This is normal. • It is possible that the only time the compressor and fan will stop is when the refrigerator is defrosting which is approximately once per day.
<p>The exterior of the appliance is warm or hot to touch</p> <p>This is normal because the appliance transfers heat from the inside out through the outer panels and the divider between the doors.</p>	<ul style="list-style-type: none"> • Ensure the appliance has the external clearances recommended in the section "Installing your new appliance". • The exterior of the cabinet will be much warmer on warmer days it may even feel hot to touch, as the appliance is working harder.
<p>Alarms Sounding</p>	<ul style="list-style-type: none"> • Check that all doors are fully closed. • Ensure that the over temperature alarm is not being activated by hot food placed in the freezer.
<p>Frost build up</p>	<ul style="list-style-type: none"> • Check that all doors are fully closed. • Ensure that the doors are not opened too often. • Ensure that the return air vents are not blocked with packaging. • Ensure the seals are clean and not obstructed.
<p>Odours</p>	<ul style="list-style-type: none"> • The interior may need cleaning, refer to cleaning guide. • Ensure that food is stored correctly as some food, containers and wrapping properly can avoid odours issue • Check appliance for old or unusual food. • Ensure replacement of the air filter every 6 months.

CONCERN	WHAT TO DO
<p>Lights not working</p> <p>The LED lighting is designed to turn on gradually. The LED lighting is designed to dim automatically if the door is left opened for more than 5 minutes and turn off completely if the door is open for more than 7 minutes. Closing the door will reset the timer.</p>	<ul style="list-style-type: none"> • Ensure that the cord is plugged into a live power outlet and outlet is switched on. • Ensure that the household circuit breaker has not tripped or that the fuse has not blown. • Check that the Refrigerator Temp setting is not in Sabbath Mode, refer to control instructions.

Ice & Water system

CONCERN	WHAT TO DO
<p>Ice maker does not produce ice or not enough ice</p> <p>The icemaker is designed to produce a tray of ice approximately every 3 hours, depending on the conditions.</p>	<ul style="list-style-type: none"> • Ensure that the cord is plugged into a live power outlet and outlet is switched on. • Ensure that water is connected and turned on and there are no kinks in the water line. • Ensure that the Ice Maker is switched on at the user interface. • Check that the water filter is not blocked or out of date. • Check the water supply flow rate. • If the freezer compartment is too warm, refer to "freezer is too warm" then wait 24 hours for the freezer to reach ideal temperature. • Turn the unit off at the mains and leave for 2 minutes then turn the appliance back on (this will reset the icemaker unit). Check for ice production after 24 hours. • Check that there is no obstruction under the ice maker and ensure the ice bin is fitted correctly.
<p>Water dispenser not functioning</p>	<ul style="list-style-type: none"> • Ensure that the cord is plugged into a live power outlet and outlet is switched on. • Ensure that water is connected and turned on and there are no kinks in the water line. • Ensure that the Water Dispenser is switched on at the user interface. • Ensure water line is purged refer to "Connecting the water supply". • Check that the water filter is not blocked or out of date. • Check the water pressure, refer to "Connecting the water supply".
<p>Ice or water has bad odour or taste</p>	<ul style="list-style-type: none"> • Cover food to ensure ice does not absorb foreign odours. • Check that the water filter is not out of date. • Interior of appliance or ice bin may require cleaning. • Discard stale ice monthly and allow ice maker to produce a fresh supply.





If you still require service


If you have a problem, and the problem persists after you have made the checks mentioned, contact your nearest Electrolux approved Service Centre or the dealer you bought the refrigerator from. Be ready to quote the model number, the 9-digit PNC and 8-digit serial number, which is stated on the label inside the refrigerator compartment.


9. NOISES

Appliance noise

Your new refrigerator may make sounds that your old one didn't make. Because the sounds are new to you, you might be concerned about them. Most of the new sounds are normal. Hard surfaces, like the floor, walls and cabinets, can make the sounds seem louder than they actually are. The following describes the kinds of sounds and what may be making them.

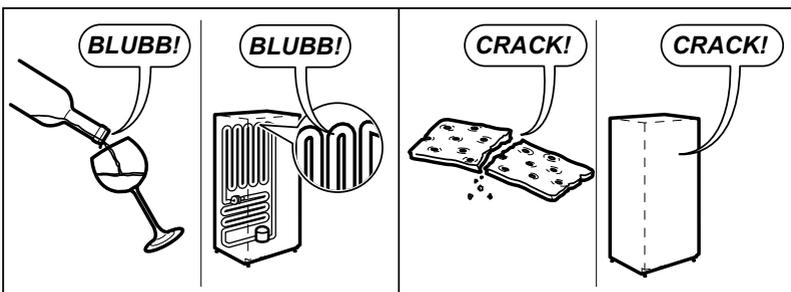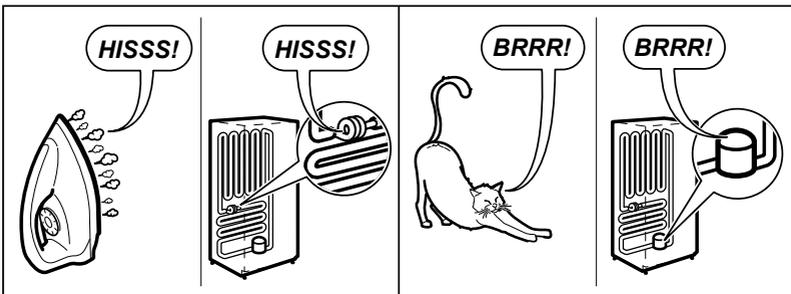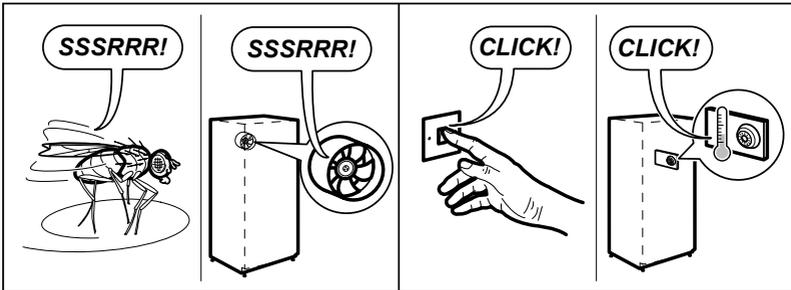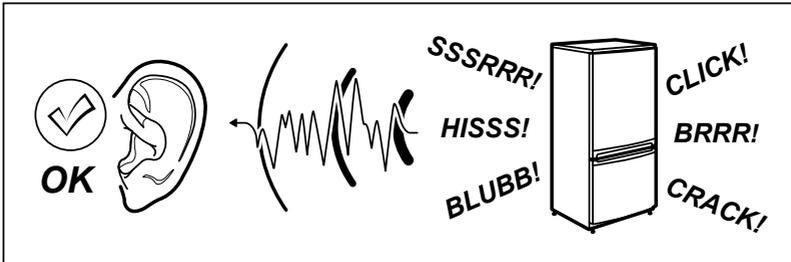

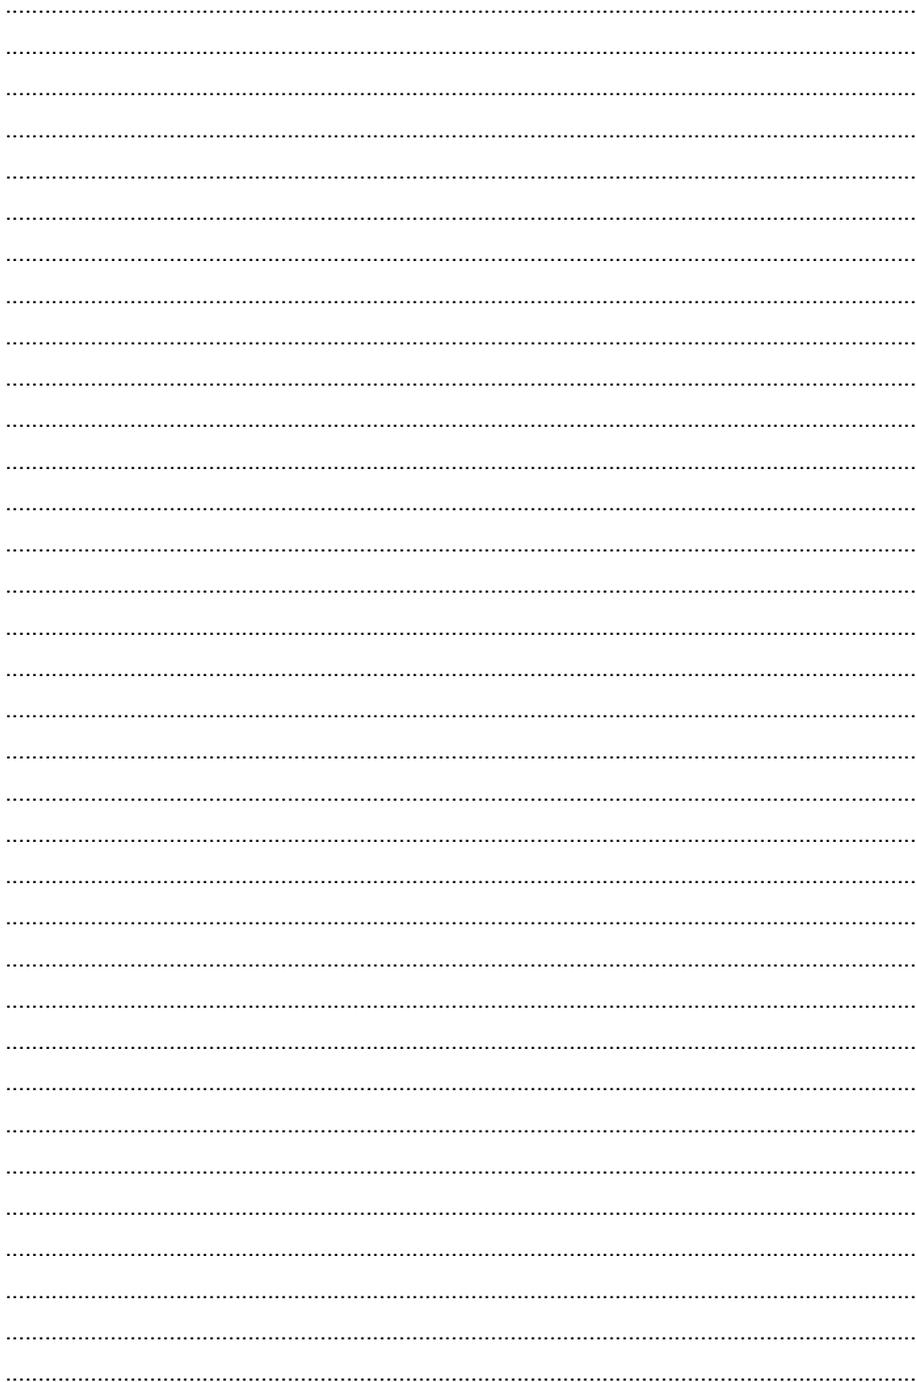

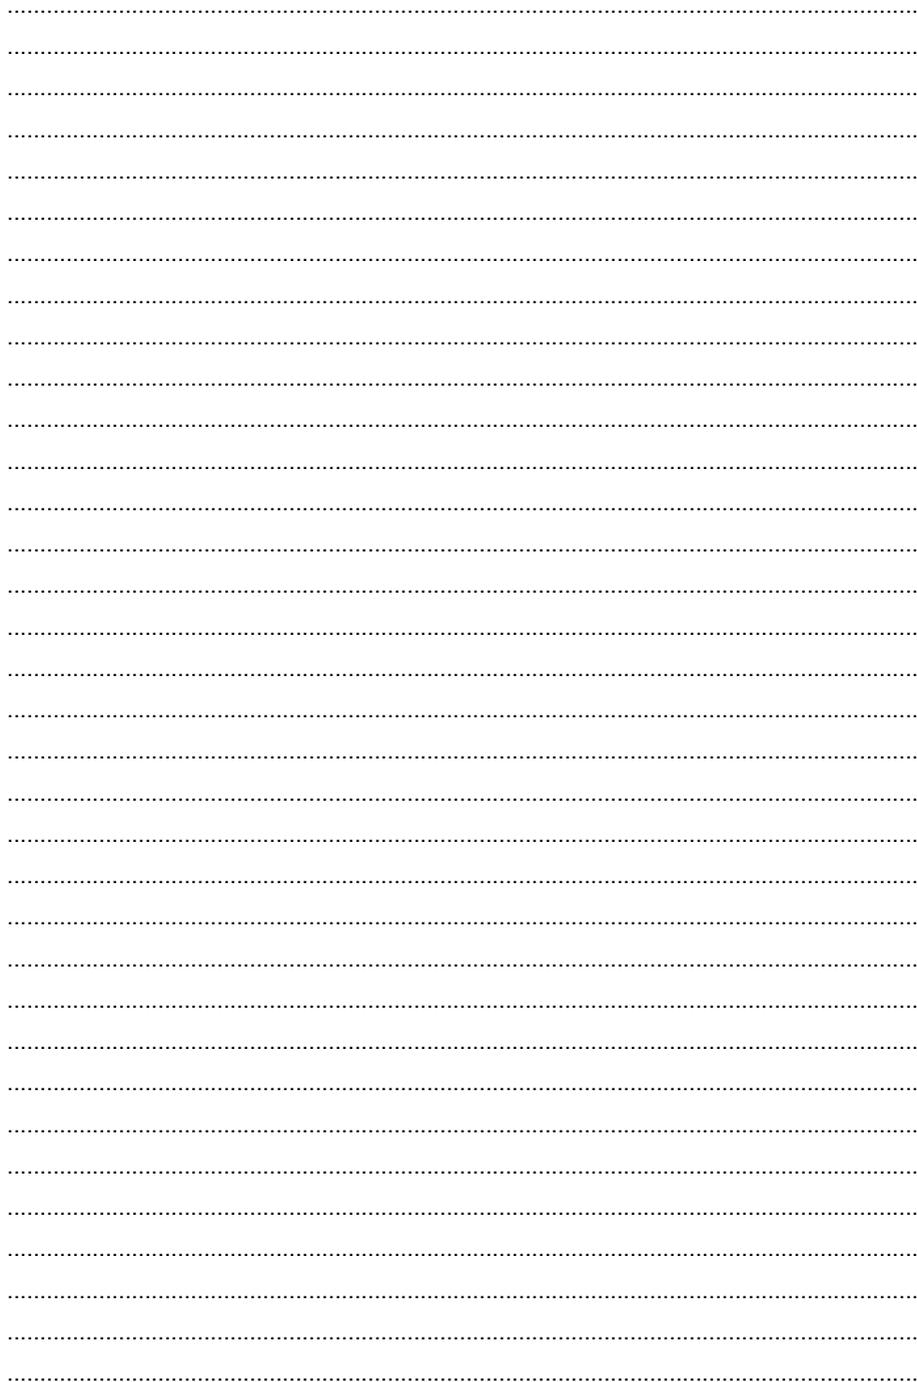



A24336567-C-492025

Disposal Information for India

 This symbol (with or without solid bar) indicates that this product and/or battery should not be disposed of with household waste at the end of their working life.

For more information on safe disposal and recycling, visit our website or call us at our toll-free number.

Visit: www.electrolux.com
Call: 1800 202 1800

